



KEES, INC.

Products for Sheet Metal HVAC, Food Service, & Architectural Construction Industries

400 S. INDUSTRIAL DRIVE - P.O. BOX 327 - ELKHART LAKE, WISCONSIN 53020 - (920) 876-3391 - FAX (920) 876-3065

INDUSTRIAL HOOD INSTALLATION AND MAINTENANCE MANUAL

RECEIPT AND INSPECTION

Upon receipt check carefully for any shipping damage to the carton, crate and hood. Verify that all items as listed on the Bill of Lading have been received. Report any damage or shortage to the carrier immediately so that any required claim can be processed.


STORAGE

If storage is required, KEES recommends storing in a finished building or warehouse. If stored outside, take care to suitably protect the unit from dirt, moisture, corrosion, damage, etc.

INSTALLATION

Remove hood crating but do not remove protective plastic film, if present, until hood has been installed. Place protective material between any equipment used to move or support the hood during installation to prevent damage to the finish of the hood.

Threaded hanger nuts for 1/2" threaded rod are provided as shown at each corner of each hood section. Longer hood sections may be provided with loose intermediate support brackets for field location and mounting to hood. If rods cannot be provided directly in the required locations, hang field supplied support bars across the hood supported from the support bars.

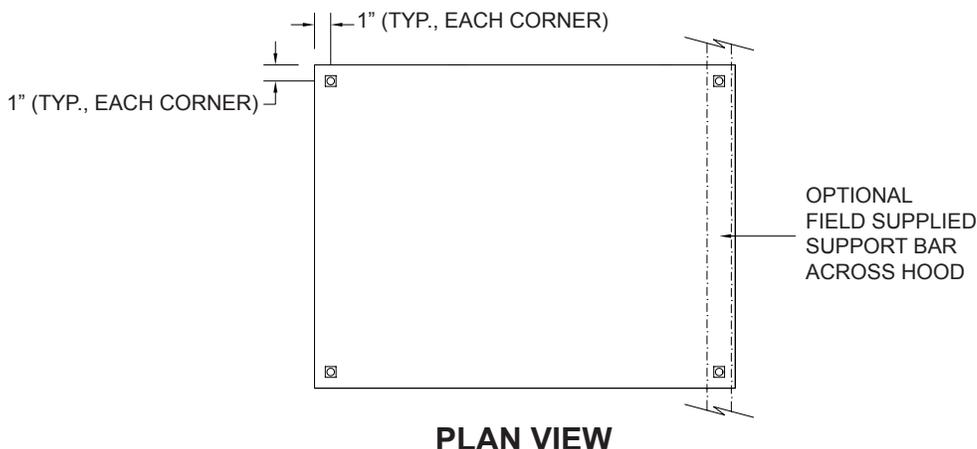

WARRANTY

KEES warrants the hood(s) and all hood components supplied for a period of 1 year from date of shipment to be without defects in material and workmanship. Any unit(s) which prove to be defective during the warranty period will be repaired or replaced at KEES option when returned to our factory, freight prepaid. KEES will not be responsible for any removal or installation costs.